

Scanner Reset codes for Ciperlab 1067 scanner

Scan the barcodes in order: 1, 2, 3a or 3b (one only), 4a or 4b (one only), 5.

1.  Enter Setup

2.  Restore Default

3. ISBN translation

(a) 
10 Character ISBN

OR

(b) 
13 Character ISBN

4. Continuous or Press button to scan

(a) Continuous Mode :

OR

(b) Non-continuous :
(always use button)



5.  Update

