

AP59S

User's Guide

Printed in Taiwan

PART NO.:49.87501.021

DOC. NO.: AP59S-1-E9811C

AP59S

Mainboard

User's Guide

Document Number : AP59S-1-E9811C
Model and Version : For AP59S version 1.xx
Manual Version : English, version C
Release Date : Oct 29, 1998

More help for latest information:

<i>Taiwan</i>	<i>http://www.aopen.com.tw</i>
<i>USA</i>	<i>http://www.aopen-usa.com</i>
	<i>http://www.aopenamerica.com</i>
	<i>http://www.aopenusa.com</i>
<i>Europe</i>	<i>http://www.aopen.nl</i>

Copyright

Copyright © 1998 by this company. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, manual or otherwise, without the prior written permission of this company.

Disclaimer

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

Intel and Pentium are registered trademarks of Intel Corporation.

XT/AT is a registered trademark of International Business Machines Corporation.

AMI is a registered trademark of American Megatrends Inc.

AWARD is a registered trademark of Award Software Inc.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Organization

Chapter 1, **Overview**, covers the introduction and specifications of the system board and special features.

Chapter 2, **Hardware Installation**, describes hardware jumpers, connectors and memory configuration. There are user friendly drawings to locate jumper and connector.

Chapter 3, **AWARD BIOS**, explains the system BIOS and tells how to configure the system by setting the BIOS parameters.

Appendix A, **Frequently Asked Question**, collects most frequently asked question of this product.

Appendix B, **Troubleshooting Guide**, includes first aid information you need if you meet trouble, the WWW address and worldwide service telephone/fax are also included.

Appendix C, **Jumper Table Summary**, gives you a tabular summary of the jumper settings discussed in Chapter 2.

Conventions

The following conventions are used in this manual:

Text entered by user,
default settings,
recommended selections

Represent text input by the user, default
settings and recommended selections

<Enter>, <Tab>,<Ctl>, <Alt>,
<Ins>, , etc

Represent the actual keys that you
have to press on the keyboard.



Note:

Gives bits and pieces of additional
information related to the current topic.



Warning:

Alerts you to any damage that might
result from doing or not doing specific
actions.



Caution:

Suggests precautionary measures to
avoid potential hardware or software
problems.



Important:

Reminds you to take specific action
relevant to the accomplishment of the
procedure at hand.



Tip:

Tells how to accomplish a procedure
with minimum steps through little
shortcuts.

Contents

Chapter 1 Overview

1.1 Specifications	3
--------------------------	---

Chapter 2 Hardware Installation

2.1 Jumper and Connector Locations	2
2.2 Jumpers	4
2.2.1 Setting the CPU Voltage	5
2.2.2 Selecting the CPU Frequency.....	8
2.2.3 Clearing the CMOS.....	13
2.3 Connectors	14
2.3.1 Power Cable	14
2.3.2 CPU Fan	14
2.3.3 PS/2 Mouse	15
2.3.4 Serial Devices	15
2.3.5 USB Device	16
2.3.6 Floppy Drive.....	16
2.3.7 Printer	17
2.3.8 IDE Hard Disk and CD ROM.....	17
2.3.9 Hard Disk LED	19
2.3.10 Panel Connector	19
2.3.11 Keyboard	21
2.3.12 IrDA Connector	22
2.4 Configuring the System Memory	23

Chapter 3 Award BIOS

3.1 Entering the Award BIOS Setup Menu	2
3.2 Standard CMOS Setup	3

3.3 BIOS Features Setup.....	6
3.4 Chipset Features Setup	11
3.5 Power Management Setup.....	15
3.6 PNP/PCI Configuration Setup	19
3.7 Load Setup Defaults.....	23
3.8 Load Turbo Defaults	23
3.9 Integrated Peripherals	24
3.10 Password Setting	29
3.11 IDE HDD Auto Detection	29
3.12 Save & Exit Setup.....	29
3.13 Exit without Saving	30
3.14 NCR SCSI BIOS and Drivers.....	30
3.15 BIOS Flash Utility	30

Appendix A	Frequently Asked Question
Appendix B	Troubleshooting
Appendix C	Jumper Table Summary